

ELEMENTS




M10 x 120



M8x50




large 8
large 6




M8
M19




ST 5.5x63

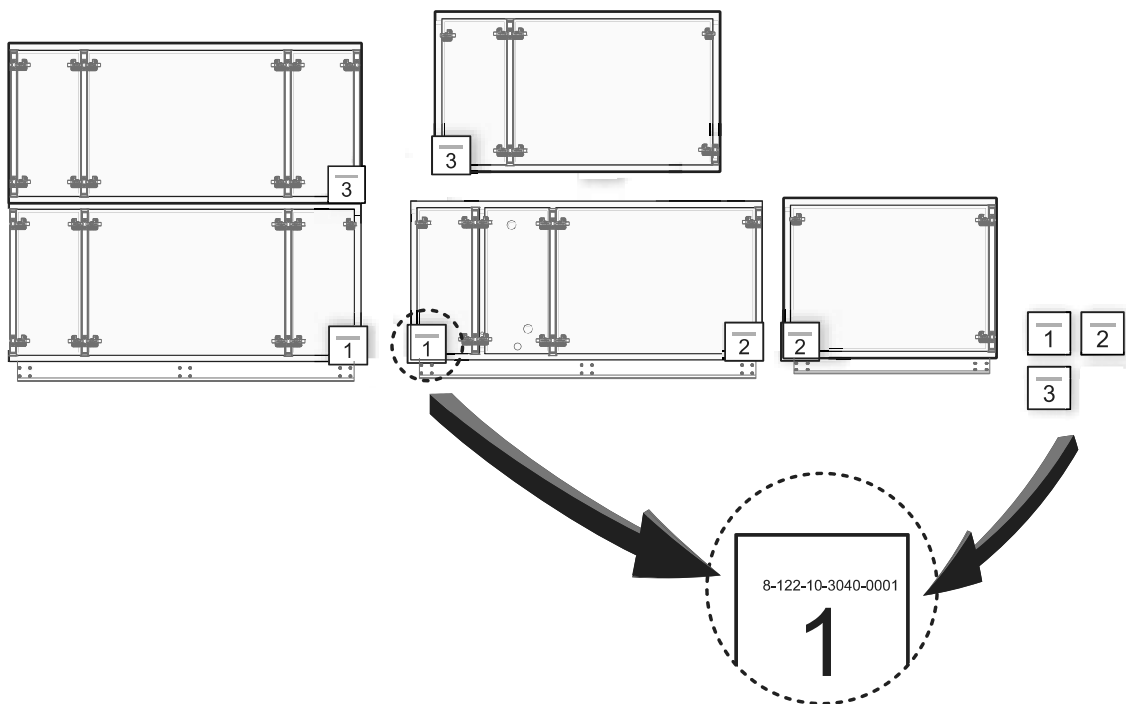


STEP 1

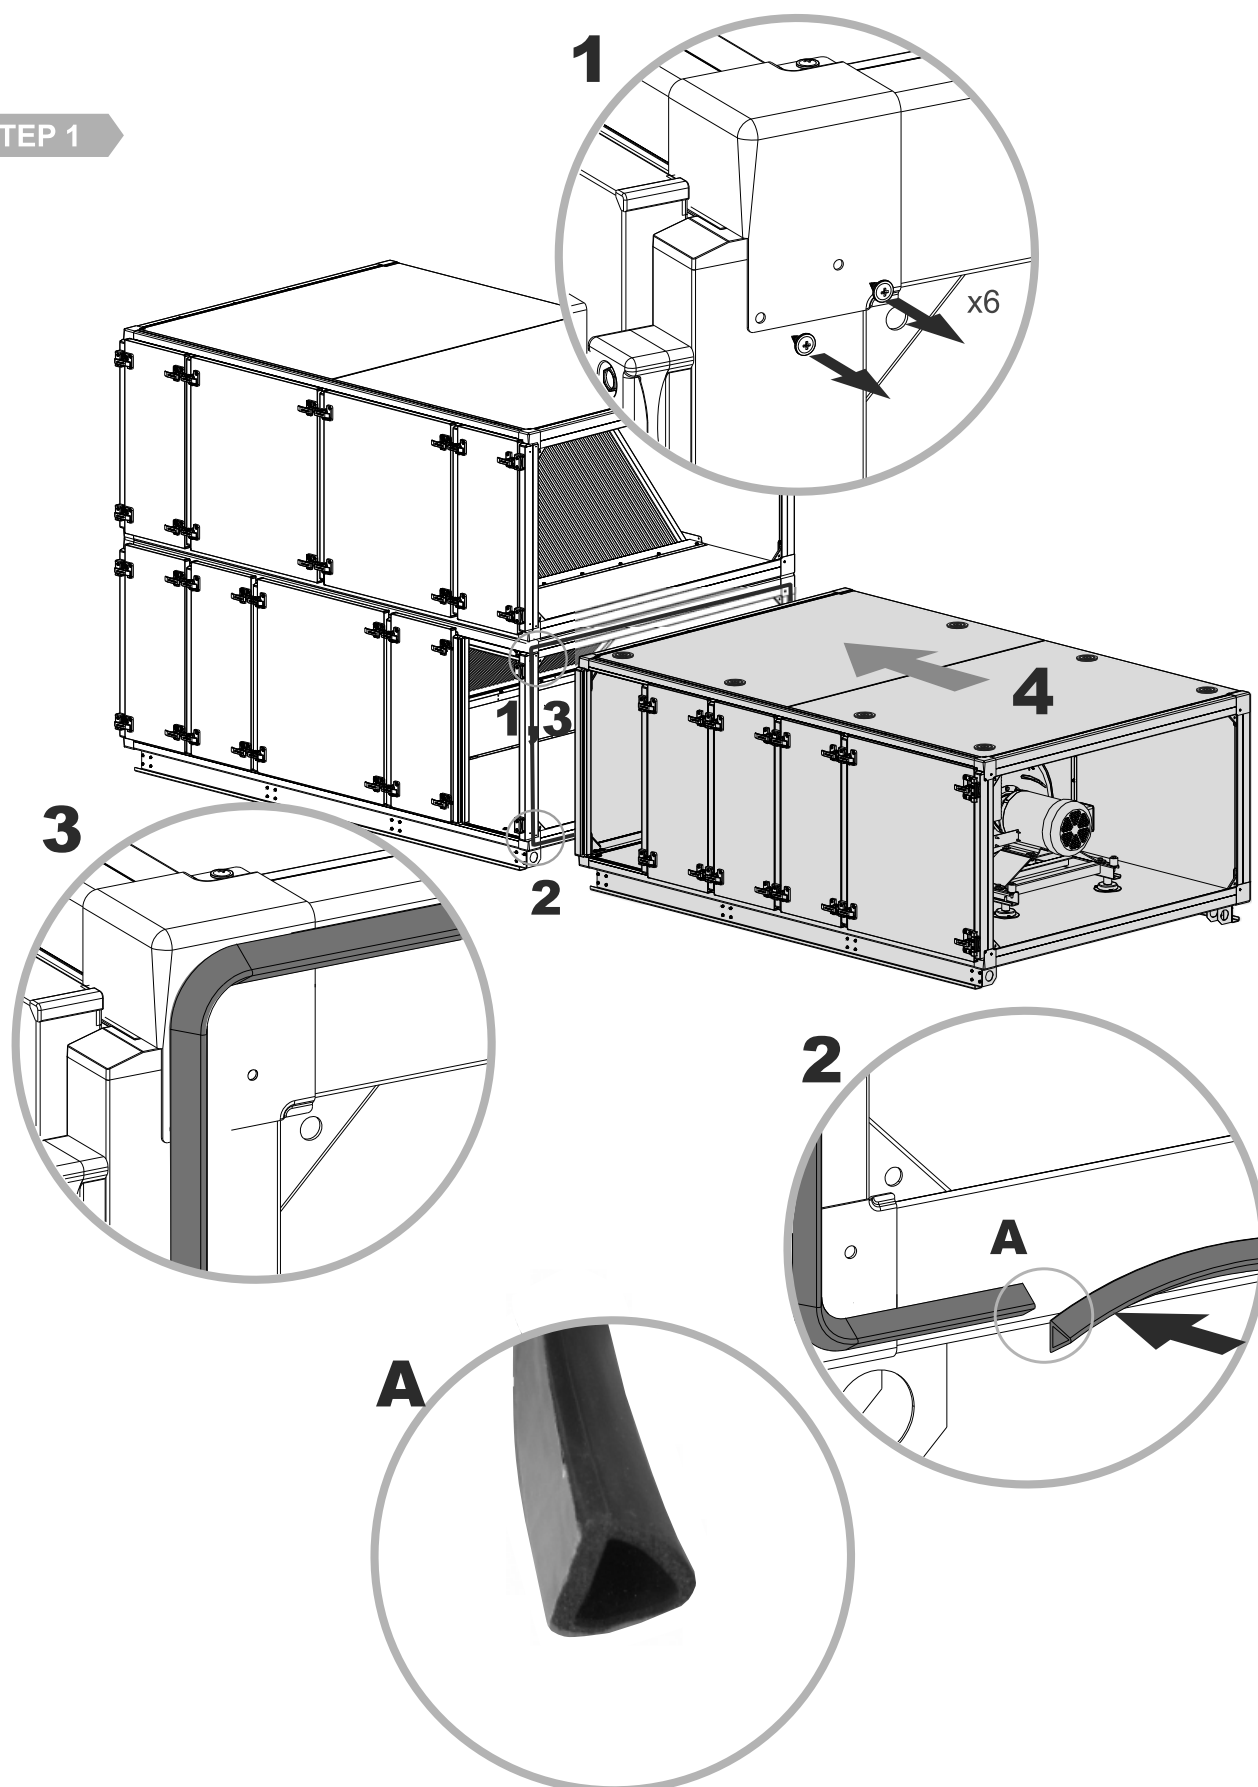


STEP 2

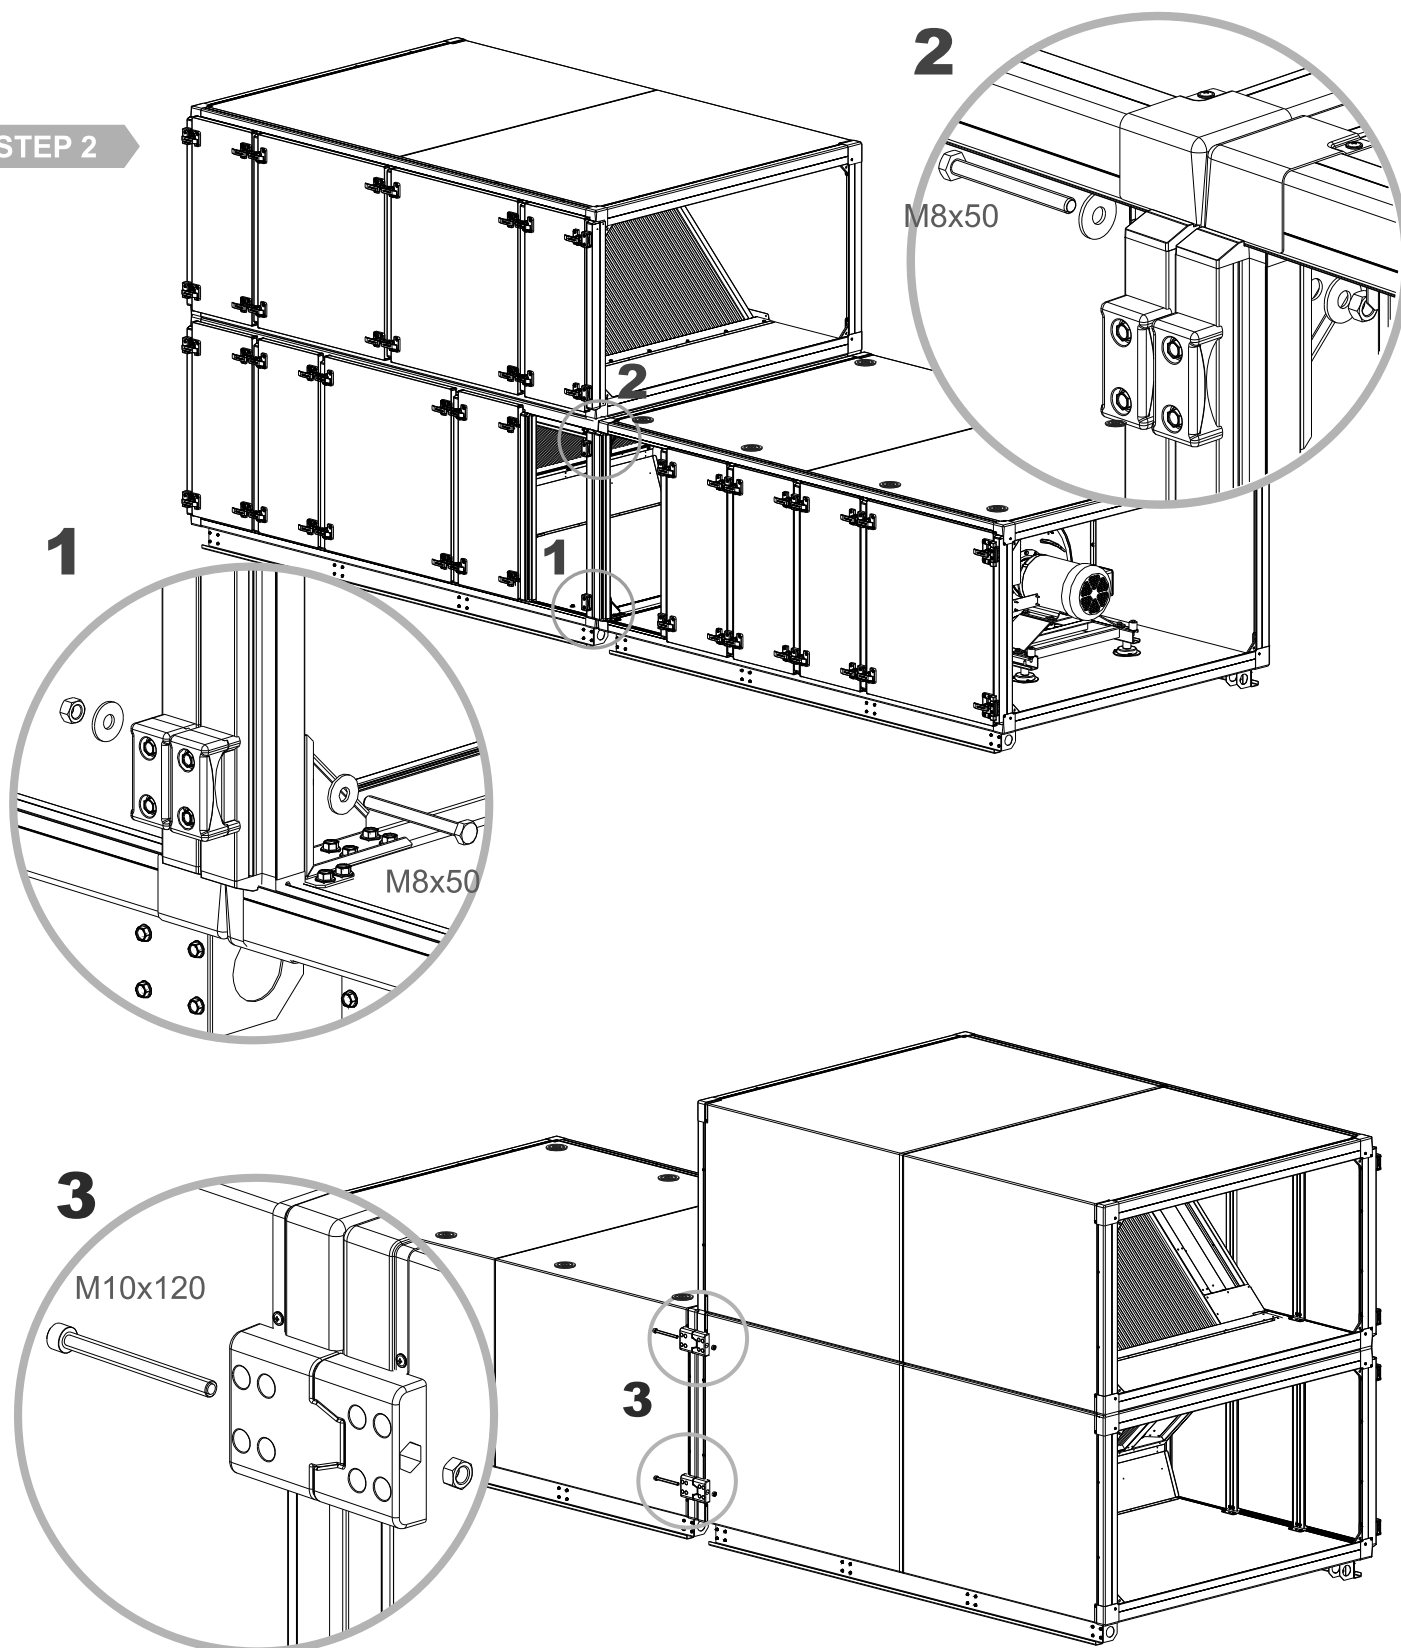


STEP 3

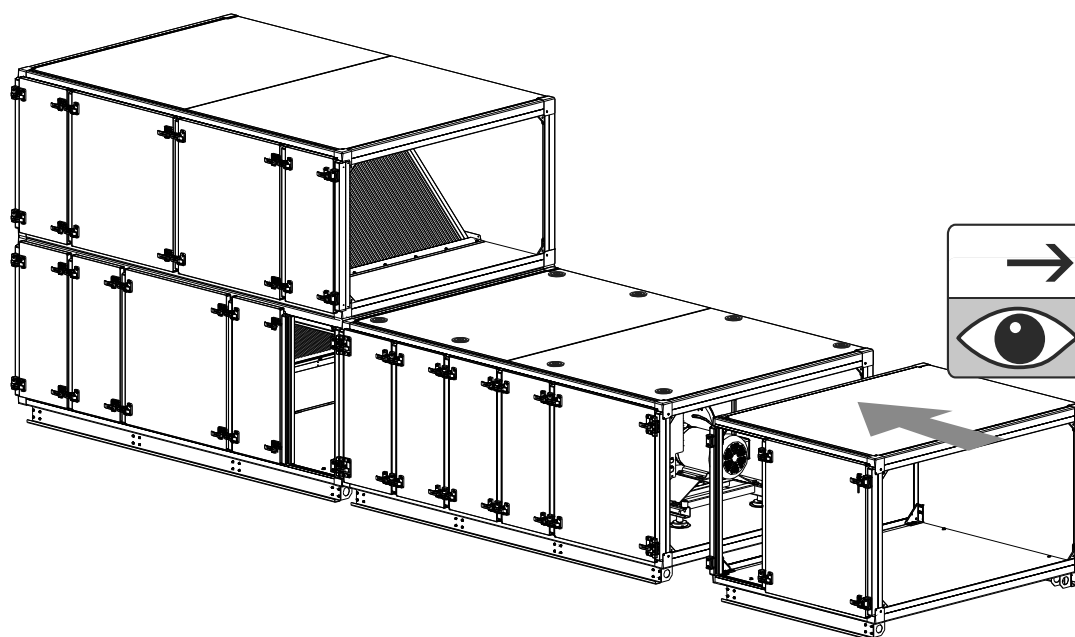


STEP 4

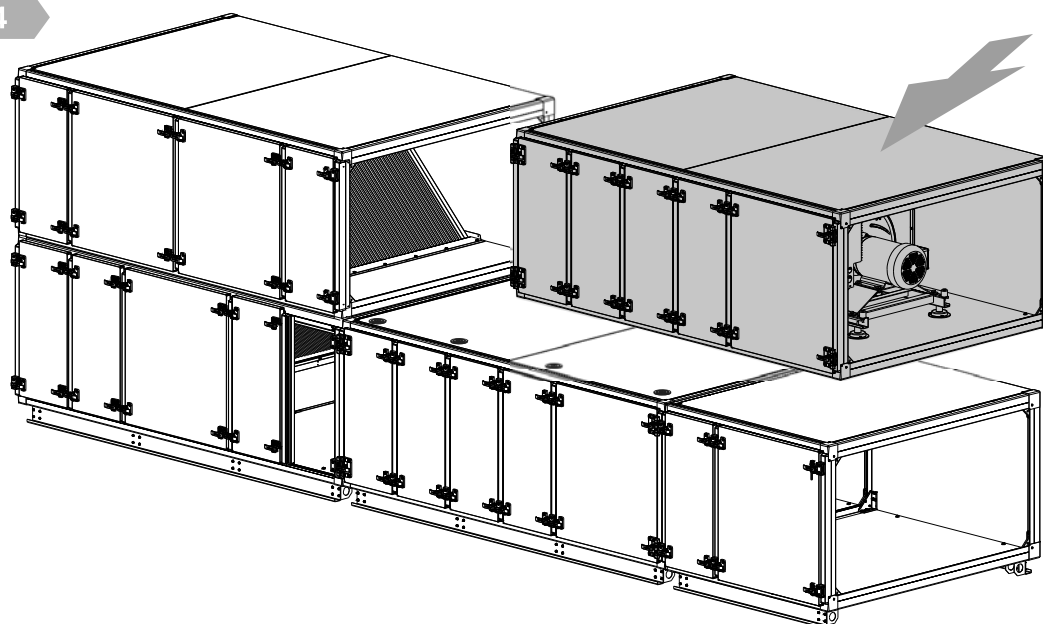

STEP 5

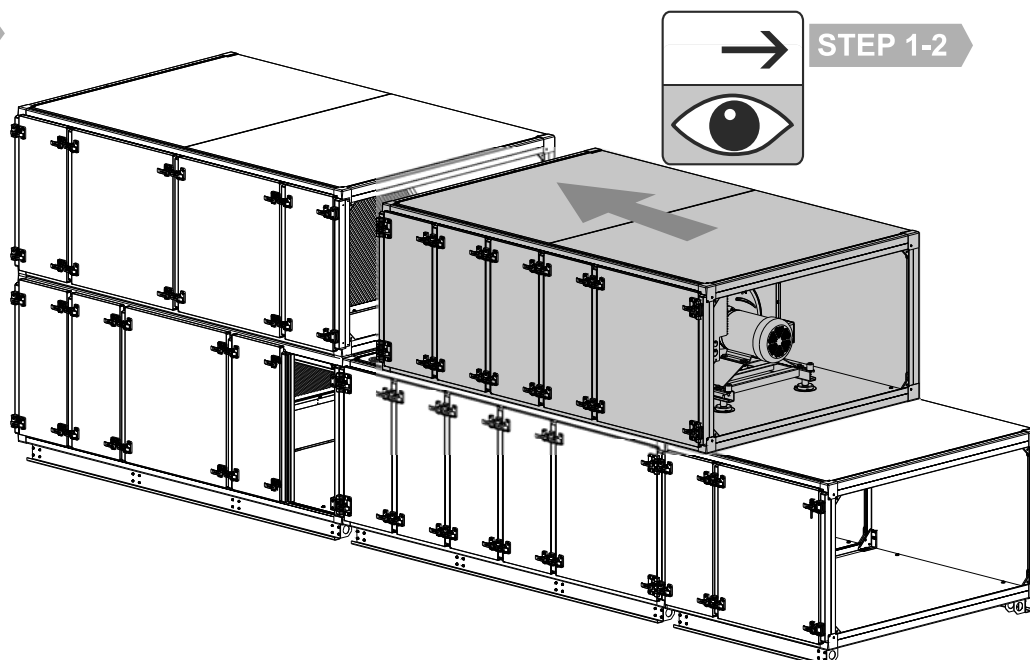

STEP 6

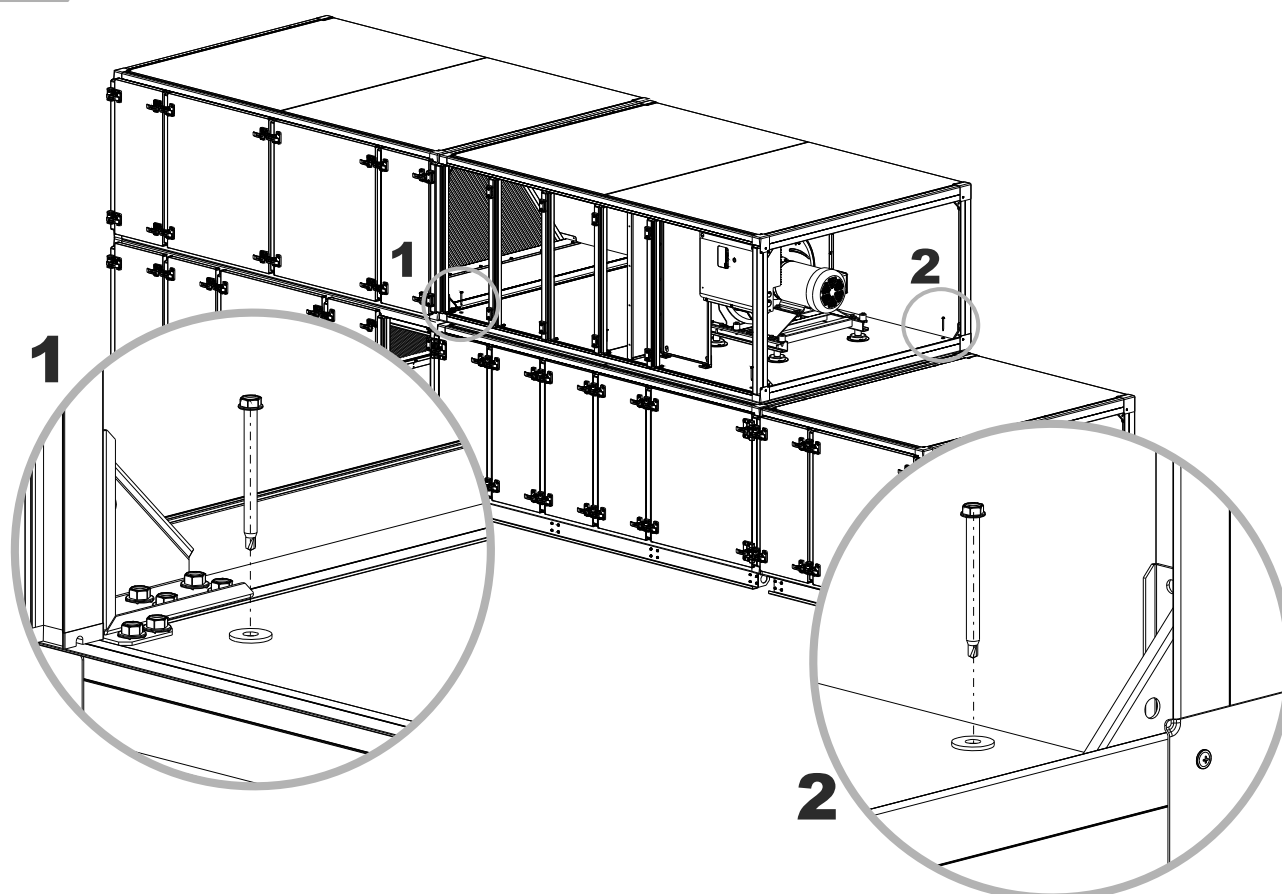

ELEMENTS




M10x120



M8x50
M12x200





large 6
large 8
large 12




M8
M10
M12




ST #5.5x63

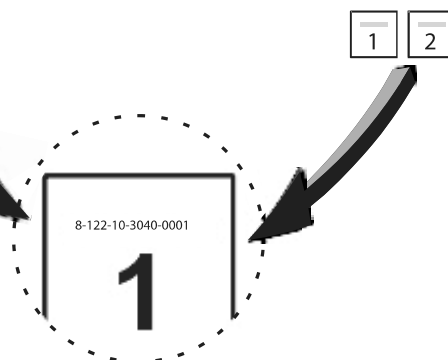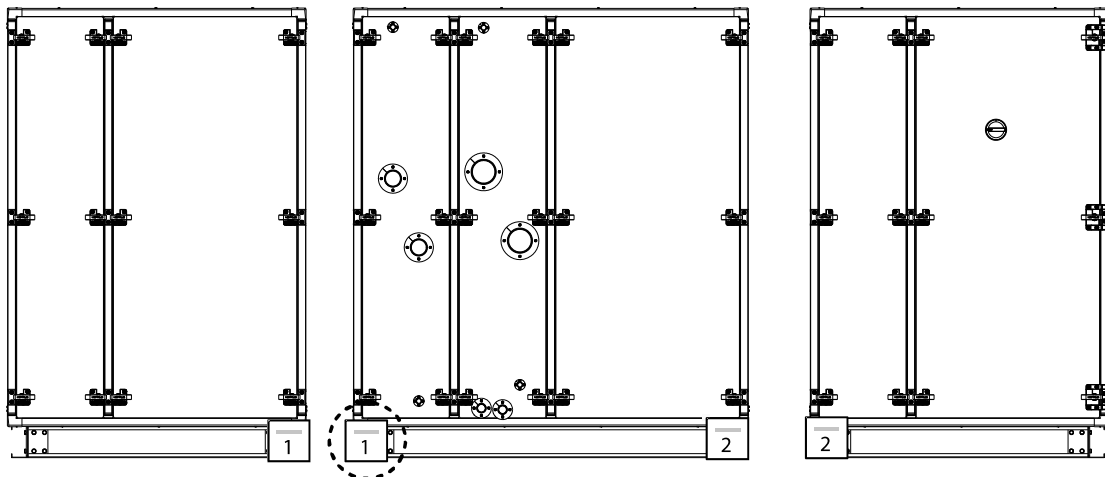


STEP 1

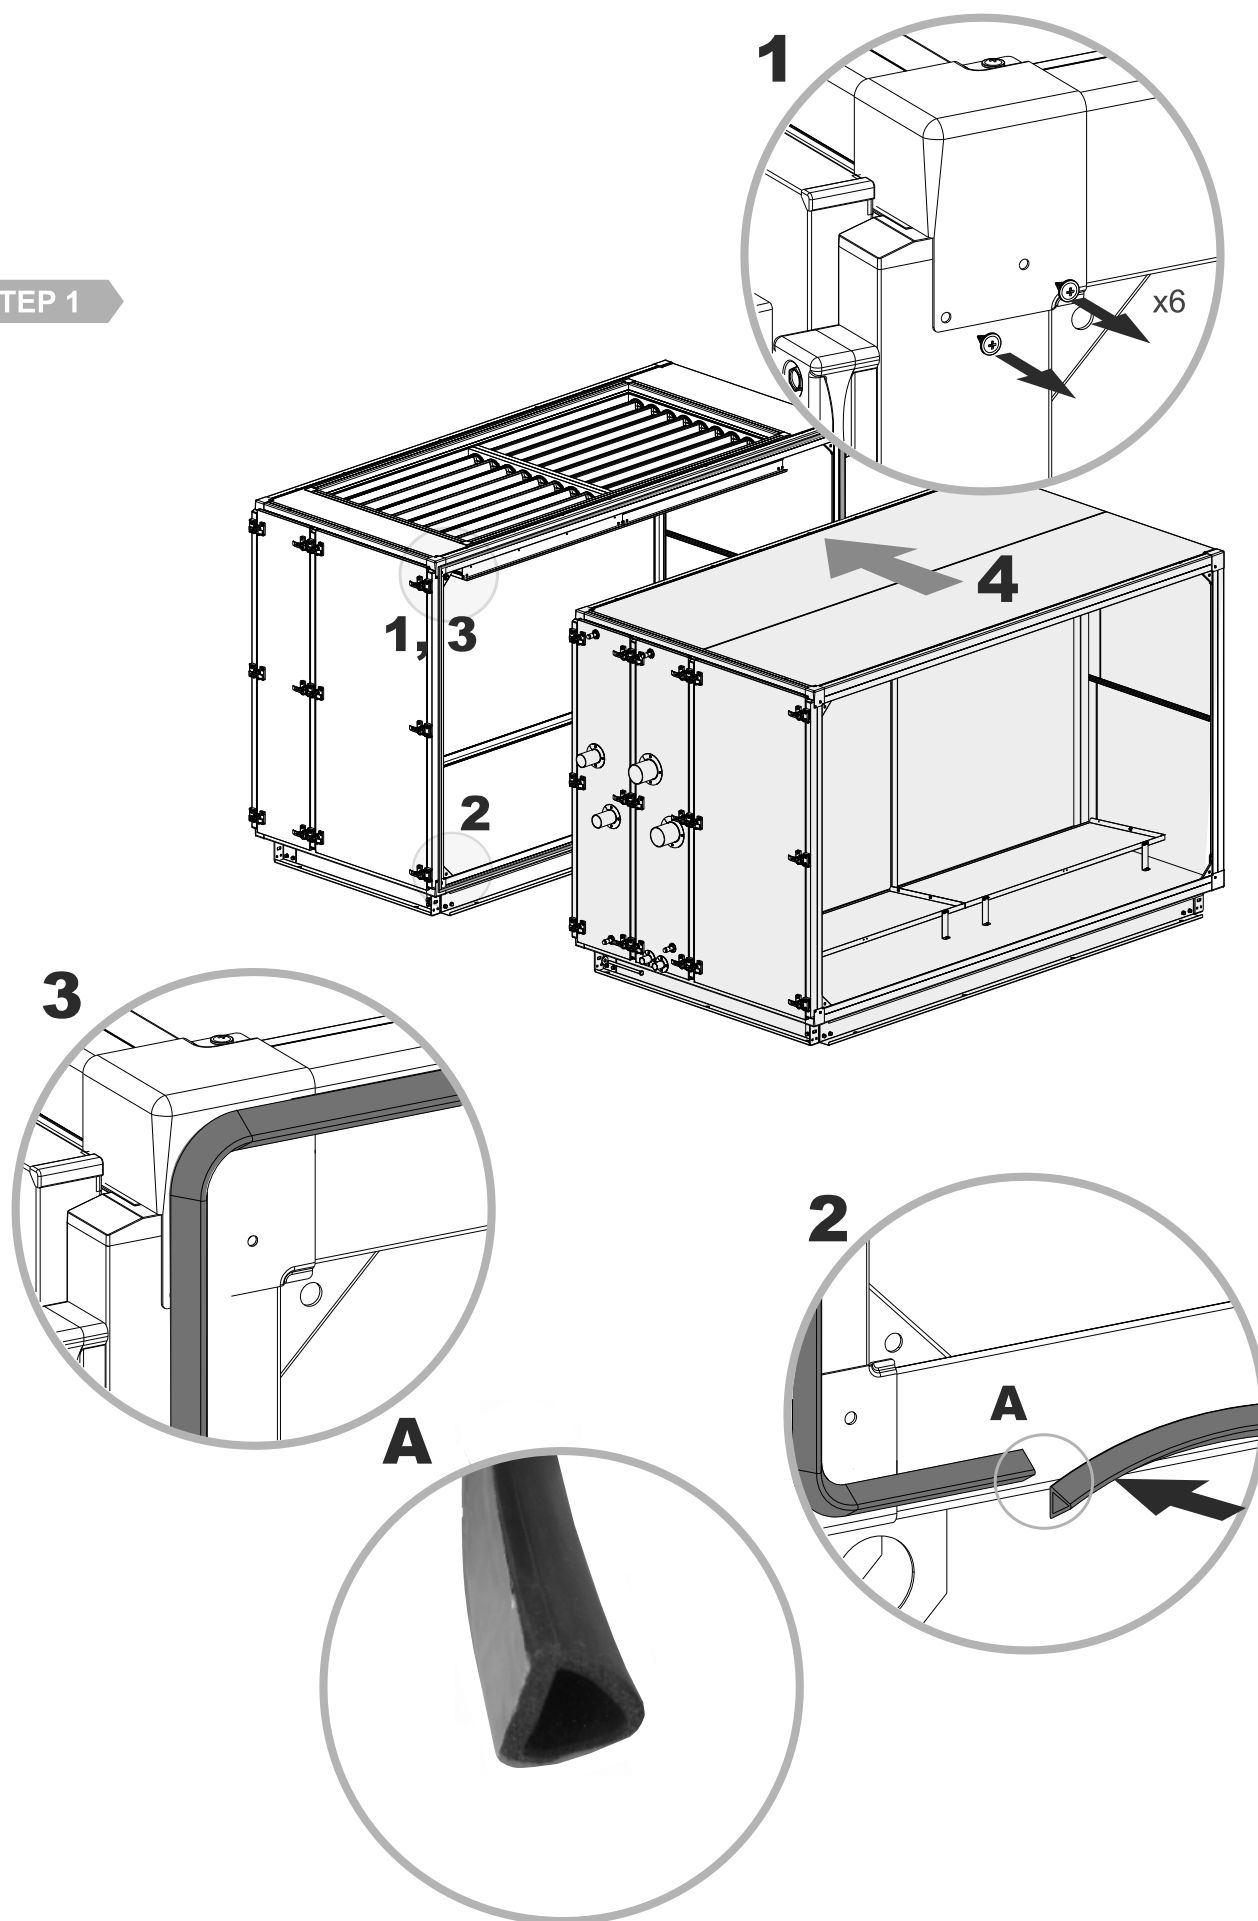


STEP 2

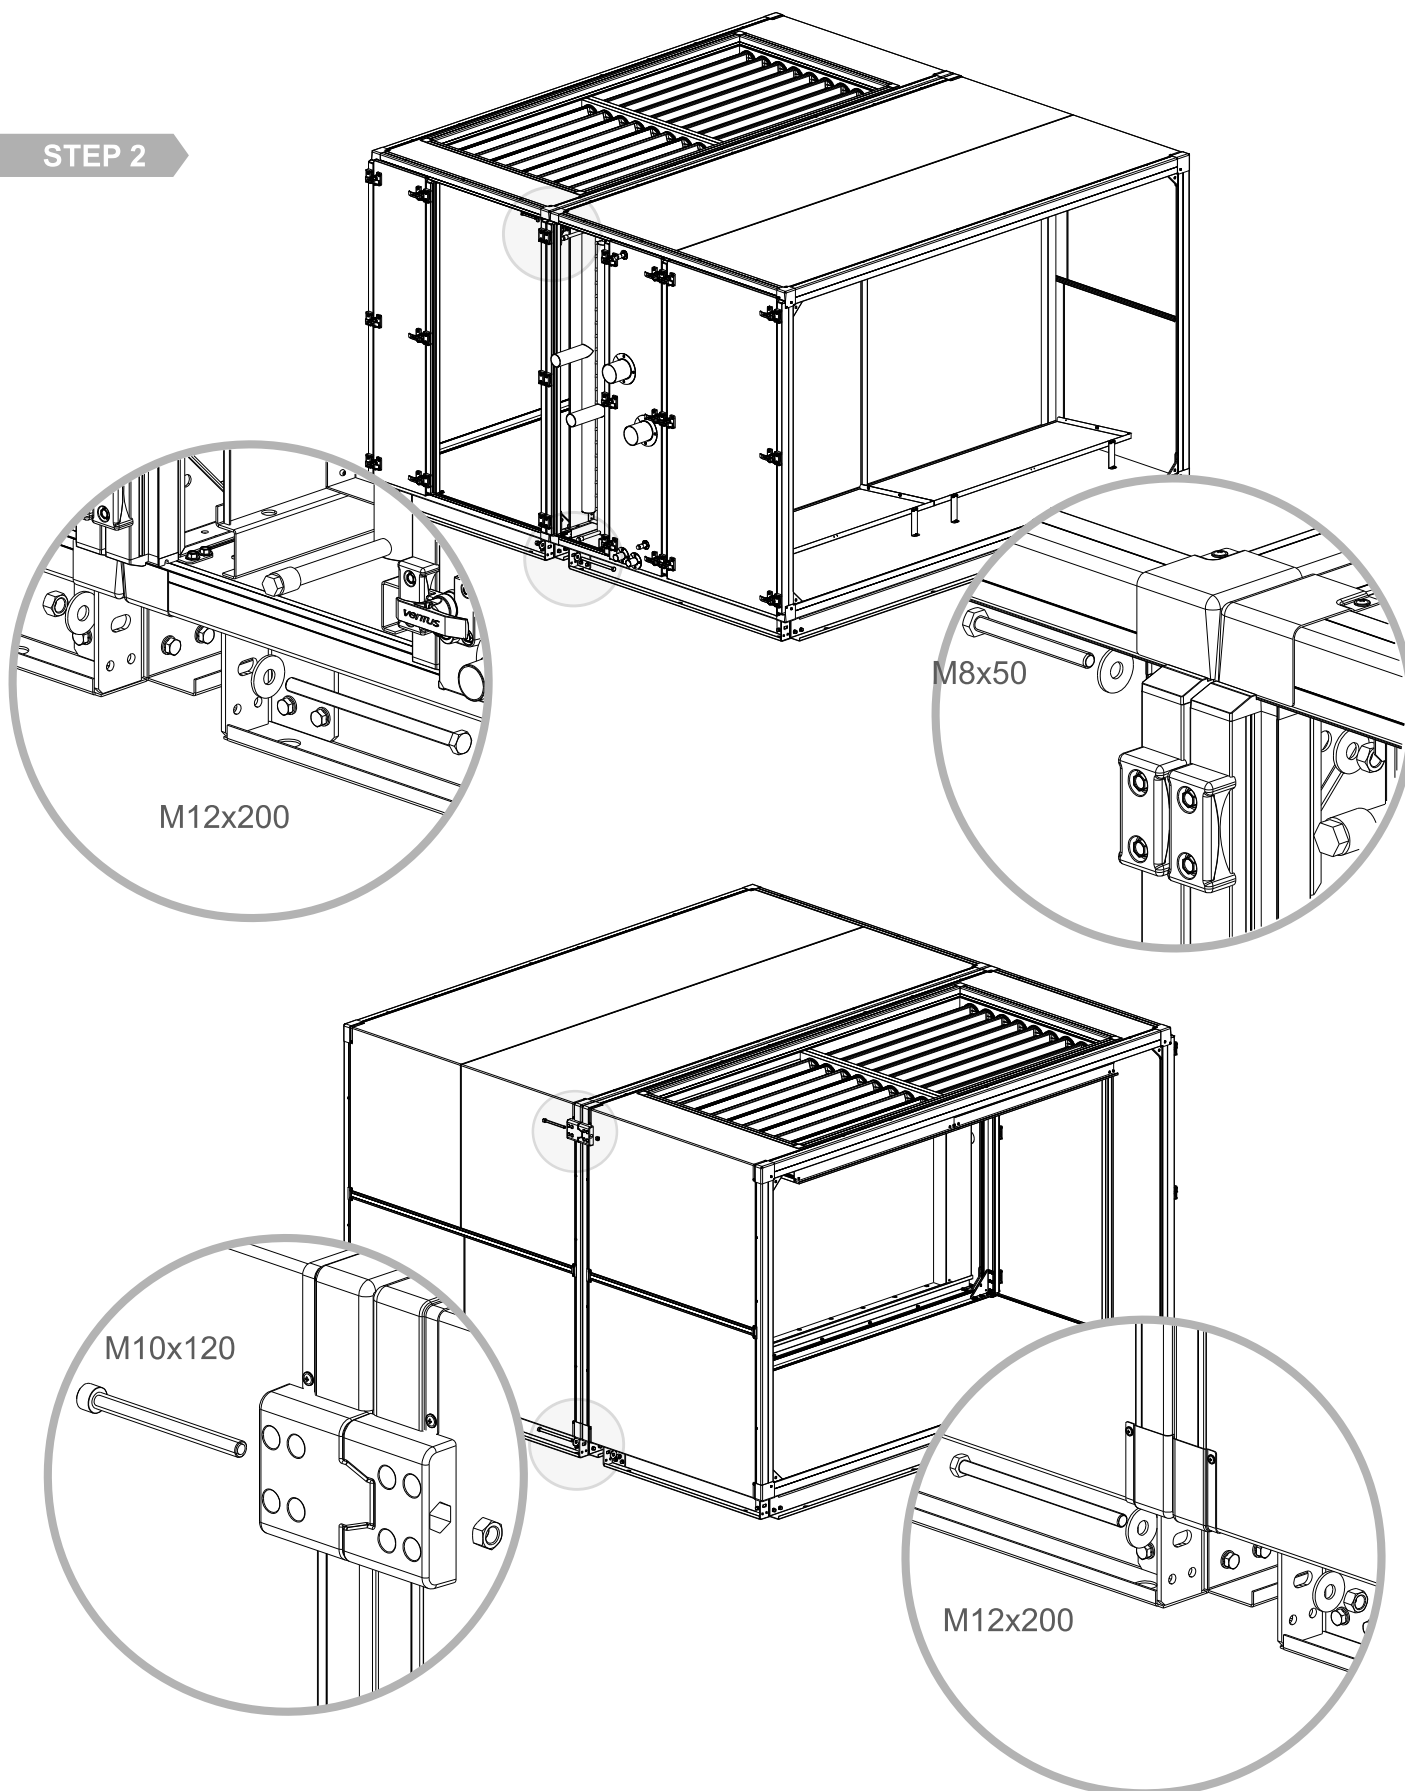




STEP 3

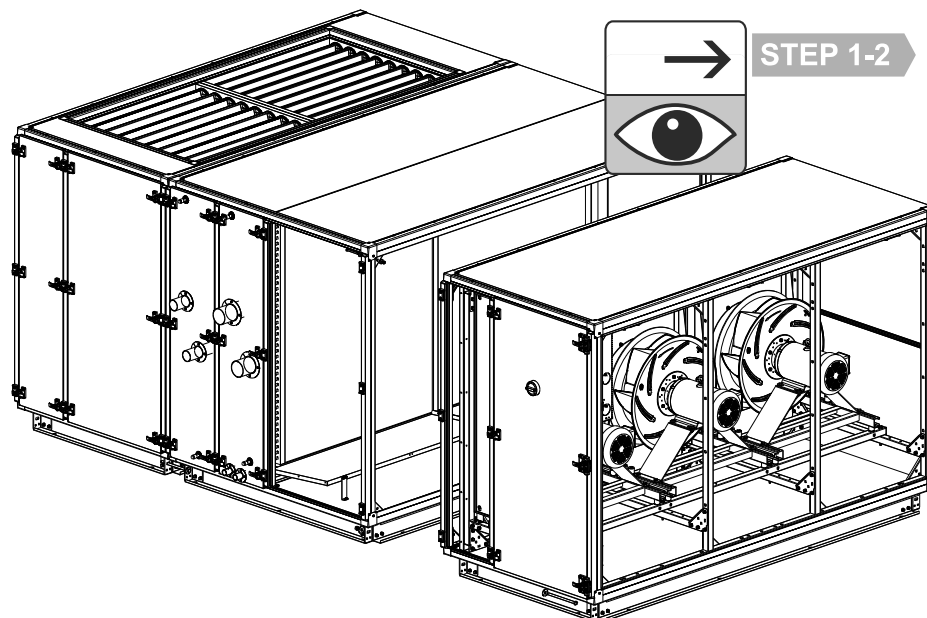


STEP 4

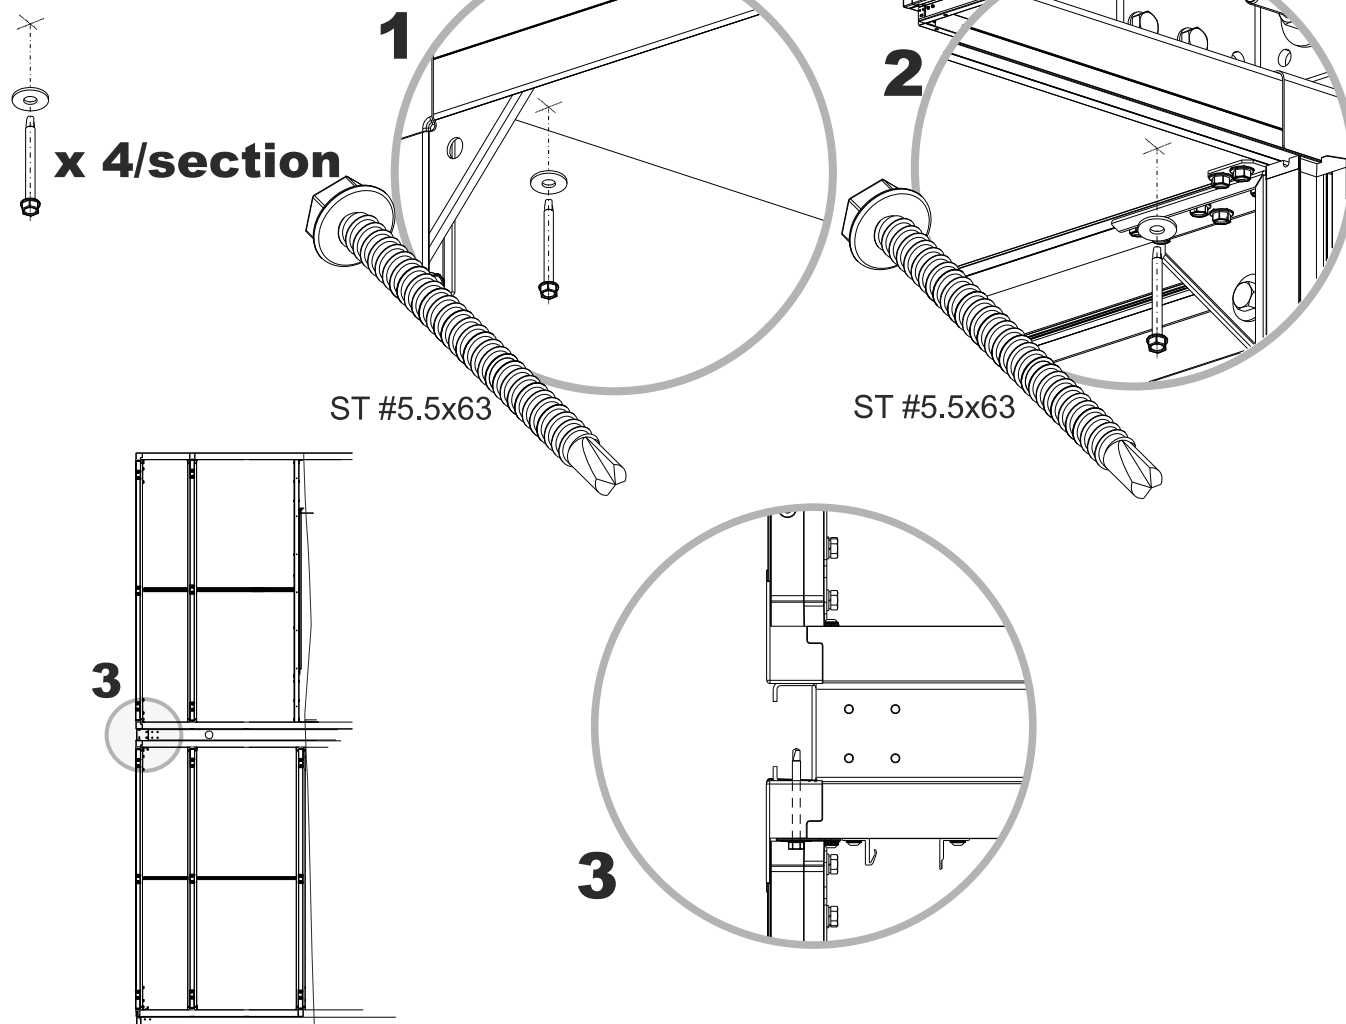




STEP 5

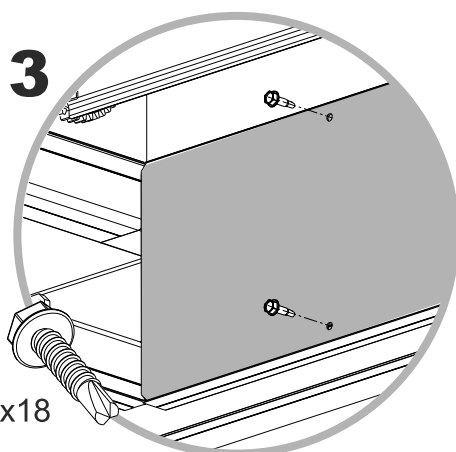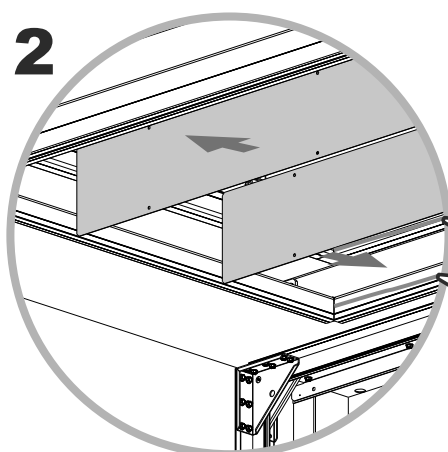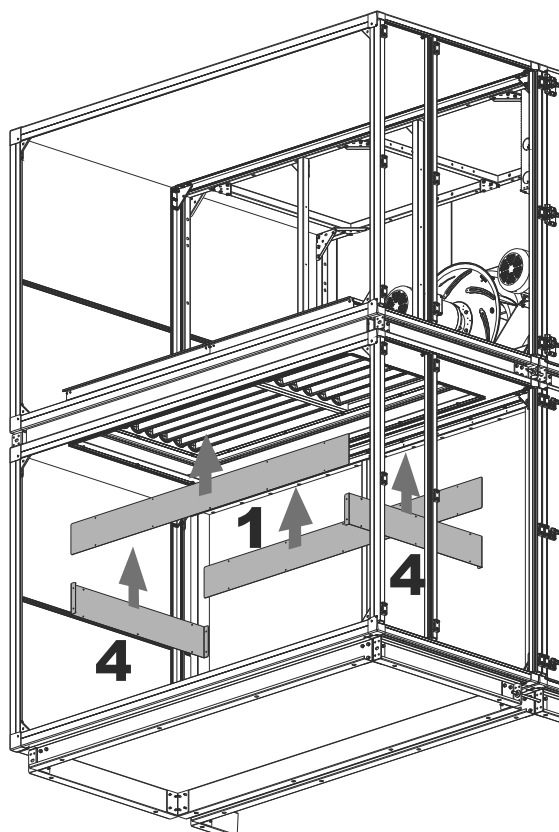



ST 4.8x18

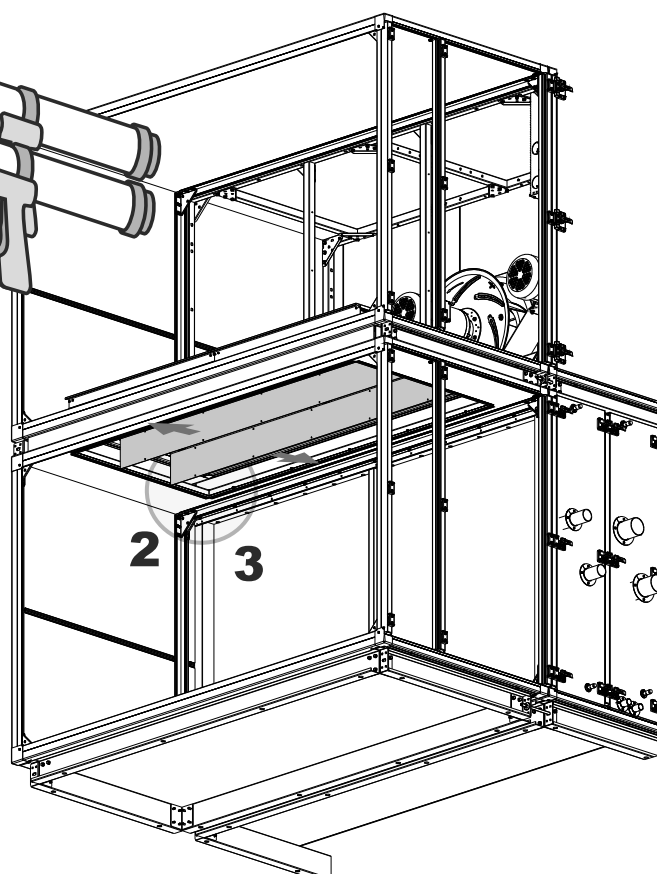

STEP 6

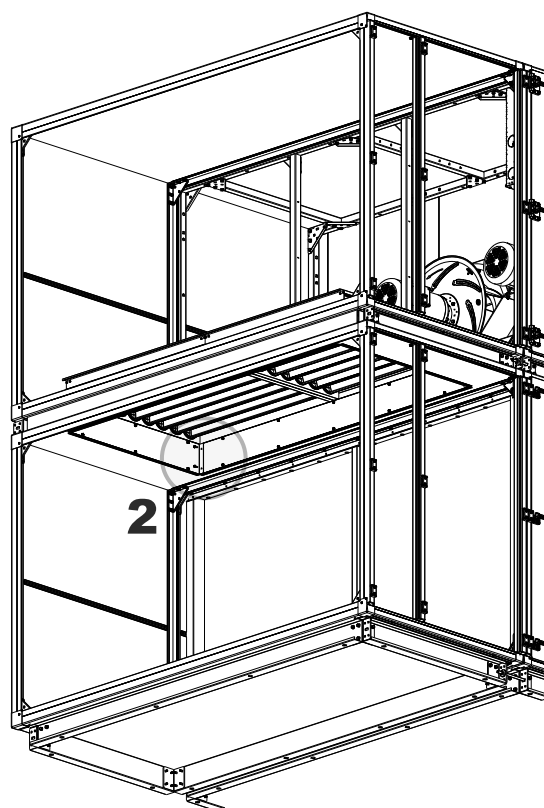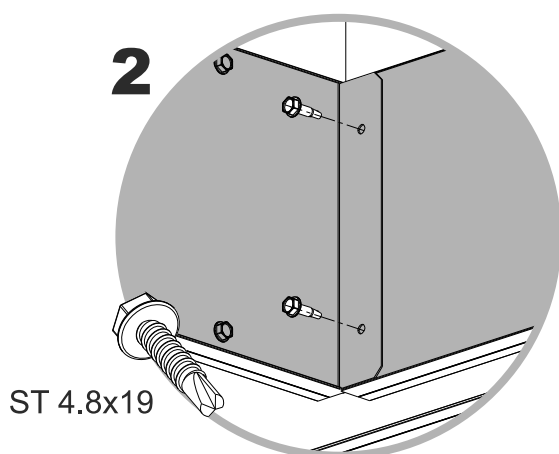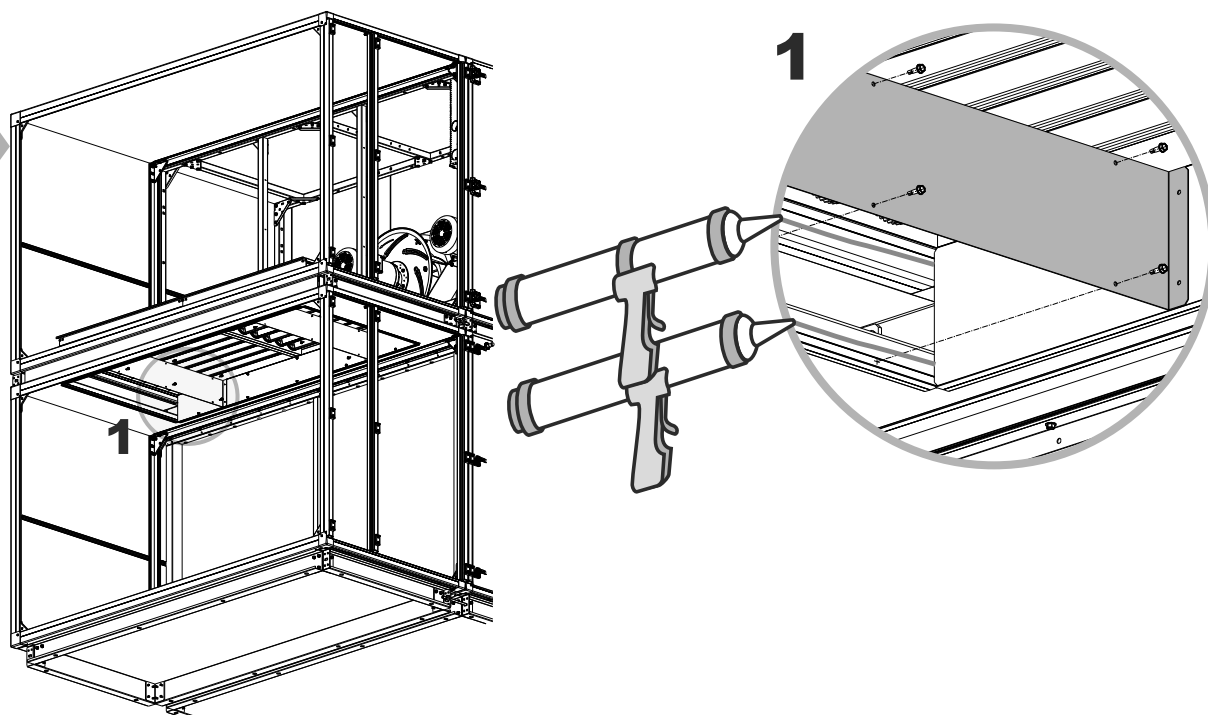

STEP 7

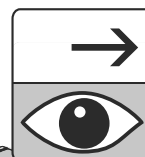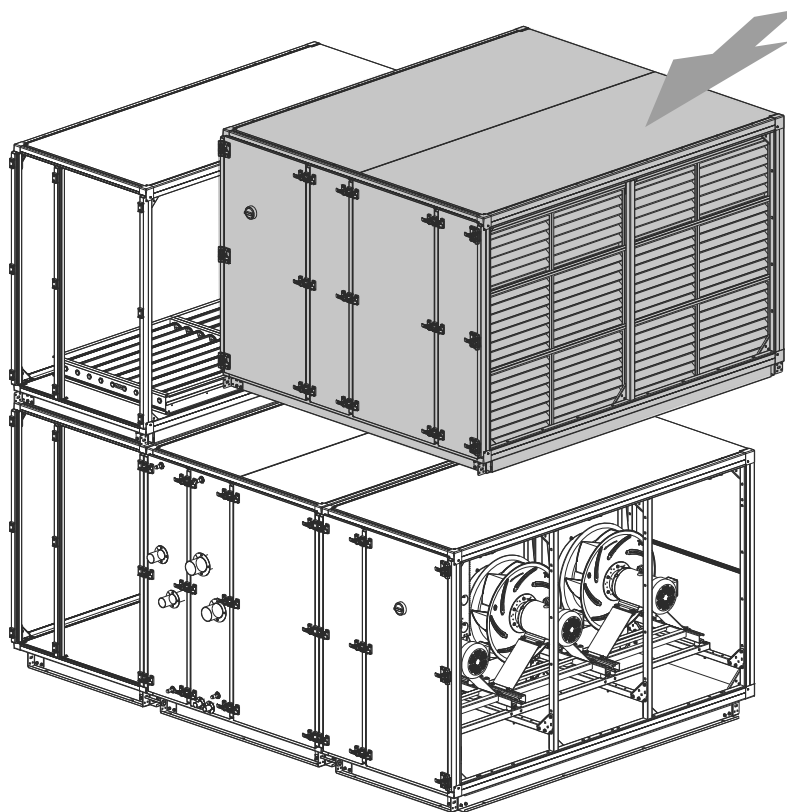

STEP 1-2, 4

